


## INSTALLATION

It is essential that the sprinkler is always installed so that the axis and deflector are truly horizontal (Fig. 4 & 5), in order to ensure the correct spray distribution.

This should be checked by using a spirit level with a 15 N/B temporary measuring pipe, hand tightened in to the sprinkler outlet fitting (Fig. 3) and then across the yoke arms after installation of the sprinkler.

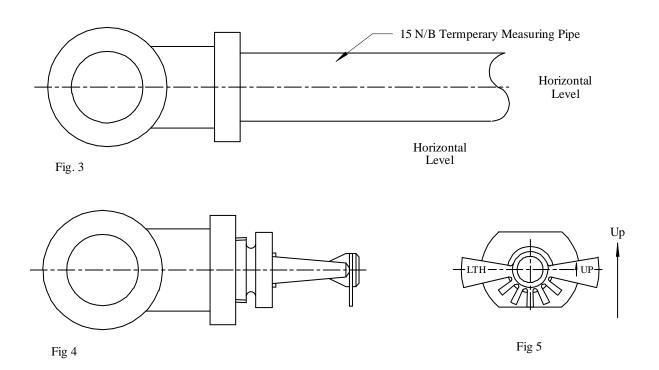

## **WARNING**

Distribution depends on deflector geometry. Should the deflector or yoke be bent or damaged, the sprinkler should be replaced. Sprinklers that have been installed **must not** be re-installed.

## **GW SPRINKLER A/S**

Kastanievej 15, DK 5620-Glamsbjerg, Denmark TEL: +45 64722055 FAX: +45 64722255 Email: sales.dep@gwsprinkler.com Data sheet also available at www.gwsprinkler.com

DATA SHEET No: GW WS045 1002 A

Data Sheet: LTH Atrium Head Installation

Page: 1 of 1

Date: 14<sup>th</sup> June 2007